

Moving the Cursor:

To move the cursor up and down, move your hand up and down. To move it left or right, move your hand left or right. Keep your hand in a relaxed position and in the general area at least 2 inches above the sensor.

Clicking:

To **click**, make your hand in a **grabbing motion (right)** and hold for about **2 seconds**

To **double click**, hold for a total of **4 seconds**

To **click and drag**, keep your hand in the grabbing motion for **about 6 seconds and move your hand around**

To **right click**, face your **palm up** and perform the **grabbing motion for about half a second**.



Enter text:

To enter text, flip your hand so your **palm is facing up** and hold the position for about **2 seconds** after the microphone icon appears in the bottom right.

Continue holding this position until you say your text, then promptly remove the hand from this position

You can either use your cursor hand, or your other hand to enter text.



Enter keys:

All voice operated key entries are preceded by **'enter text' hand motion**. Hold the position for about 2 seconds then say the command.

The current supported keys are:

'Enter', 'Backspace', 'Tab'

Voice Commands:

All commands are preceded by the **'enter text' hand motion**. Hold the position for about 2 seconds then say the command.

The current commands available are: 'Exit Tab', 'Exit window', 'Save file', 'Undo', 'Redo', 'Open file', 'Help'

